

# CMO MOTOR LIMIT SETTING

## FOR MOTOR WITH WRAP AROUNDS

1: When getting ready to set limits locate your Pull –Off Tool For Limit setting Tool. (Tapped to back of Housing)

2: Take Pull-Off tool and put hook through hole of CMO limit setting Tool.

3: When setting limits keep in mind that the limits are NOT open, so first open the limits by pulling straight out on the tool, then run shutter to where limits need to be set at then pull straight on the tool again which will let the Limit button pop back out, in which being SET.

4: These Only occur, 1: Operator Inside Right Exit 2  
2: Operator Inside Left Exit 6,5,4,1

