

## A

Additional function

### Setting up

During the settings, the time between two operation must be shorter than 10s, otherwise it will quit the setting

After matching code for new emitter, it will clear all the data in receiver.



$T > 10s$



Beep once

$T < 4s$



Beep once



Beep once



Beep 3 times

OK

Set up is ok.  
The up button control the motor clockwise.



Beep 3 times

OK

Set up is ok.  
The down button control the motor clockwise.

## A

Additional function

### Add Emitter

During the settings, the time between two operation must be shorter than 10s, otherwise it will quit the setting



Emitter a is the one already passed matching code, emitter b is the one has not



Beep once



 
Beep once



Beep 3 times

OK

Emitter adding is ok



## A

Additional function

### Light adjust function

During the settings, the time between two operation must be shorter than 10s, otherwise it will quit the setting



Repeat setting, function is cancelled



Beep once



Beep once



Beep 3 times

OK

The light adjust function is ok

## A

Additional function

### Run for hint

During the settings, the time between two operation must be shorter than 10s, otherwise it will quit the setting



Repeat setting, function is cancelled



Beep once



Beep once



Beep 3 times

run for hint

OK

The run for hint function is ok

## A

Additional function

### Cancel emitter

During the settings, the time between two operation must be shorter than 10s, otherwise it will quit the setting



Cancel emitter setting is to clear all the data in receiver



Beep once



 
Beep once



Beep 3 times

OK

Cancelling is ok



# DC50B

## Receiver Specification

Version NO. : A/00



### Receiver specification

Technical support



DC50B receiver

Maximum output power: 500W  
One DC50B receiver can store maximum 20 emitter channels. If there are already 20 channels, it will take turns to Cover the last channel.



- When emitter is under group control, match code will be invalid.
- When receiver is in dot-move mode, press up or down button within 2 seconds, motor will be controlled to operate in Dot-move mode; if keep pressing over 2 seconds, motor will continuously work.




### Control range

Technical support



Effective transmitting distance may have deviation due to actual environment

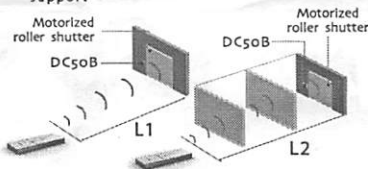


	L1 open	L2 partition	Emission frequency
120V/60Hz	200m	35m	433.92MHz / 868MHz



### Matchable emitter

Technical support

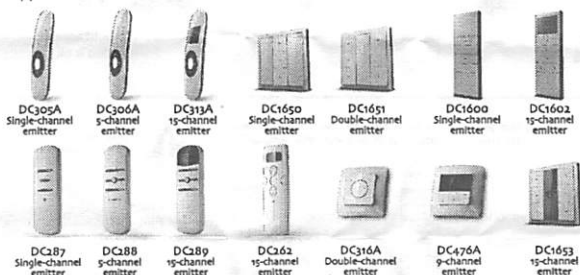

### Matchable motor

Technical support



DM45S




DC50B receiver



### Mode of connection


Technical support

120V/60Hz according to product nameplate

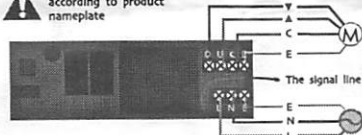

Black=Down  
Brown=Up  
Blue=Common  
Green/Yellow=Earth  
Blue=Neutral  
Green/Yellow=Earth  
Brown=Live

### The best installation distance

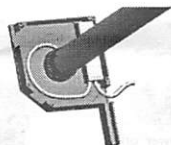

- The shortest distance between receiver and ground  $\geq 50$ mm
- The shortest distance between receiver and roof  $\geq 30$ mm
- The shortest distance between receiver and receiver  $\geq 0.2$ m